

PR53XX Ribbon Installation Manual



TeamNiSCA

5/2011

Rev 2

RIBBON INSTALLATION INSTRUCTIONS


NISCA PR-53XX Series Printer



*World Class
Identification Card Printers*

Getting Started

IMPORTANT! Press the Ribbon Change button **BEFORE** removing the ribbon cartridge.

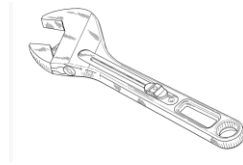

Contents Required

A Nisca Genuine supplied ribbon.



Nisca Ribbon

Note: Nisca card printers require special ribbons to function properly. For this reason, use only genuine Nisca ribbons from Nisca authorized resellers. The use of non Nisca ribbons may void the warranty and reduce the print quality and durability of your cards

Ribbon Installation Instructions

The PR53xx series printers can accept various ribbon types. Depending on your model, the following are available ribbon types:

Ribbon Type	PR5300	PR5310	PR5350	PR5360LE
<i>K</i>	•	•	•	•
<i>KO</i>	•	•	•	•
<i>YMC</i>	•	•	•	•
<i>YMCK</i>	•	•	•	•
<i>YMCK02</i>	•	•		
<i>YMCK03(3BP)</i>			•	•
<i>YMCK0K2</i>	•	•	•	
<i>YMCFK</i>	•	•	•	•

Initially, the print head has been retracted at the factory for shipment so you do not have to press the Ribbon Change button for initial setup. To load the ribbon, follow these steps:

Remove the print head packing material from the ribbon cartridge.

Open the ribbon cartridge by sliding the release lever to the left.



Remove new ribbon from its packaging and place on the supply side of the ribbon cartridge.




Take up
Side

Supply
Side

Locate the empty ribbon bobbin packaged with the printer accessories and place on the take up side of the ribbon cartridge. Note: If you are replacing a used ribbon, than use the empty bobbin from the depleted ribbon.

Remove the tape and pull the released ribbon towards the take up bobbin. Attach the tape to the bobbin making sure the ribbon is centered on the bobbin.

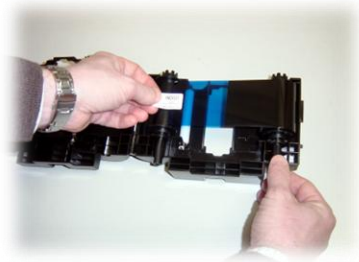

Advance the take-up bobbin 2-3 turns to verify that the ribbon is properly seated on the bobbin and all slack has been removed from the ribbon.



Close the ribbon cartridge and slide the release lever to the right ensuring the cartridge is securely locked.

Slide the ribbon back into the printer and lower the green retaining lever to lock the ribbon cartridge in place. Close front access panel.

Information in this document is subject to change without notice and does not represent a commitment on the part of Nisca. This document may not be copied unless authorized with a written consent by Nisca. The users of this product accept the hardware and software solution provided is the intellectual property of Nisca and agrees from herein not to reproduce or copy for any purpose including for resell or manufacturing. Other trademarks and trade names used in this document belong to their respective holders. Nisca disclaim any proprietary interest in trademarks and trade name created other than its own.