

Card Thickness Adjustment

When loading cards that vary from the standard size, it is necessary to make a simple adjustment to the printer. To adjust the card size, follow these steps:

1. Open the card feeder door and remove cards.
2. Loosen the two phillips head screws on the adjustable gate.

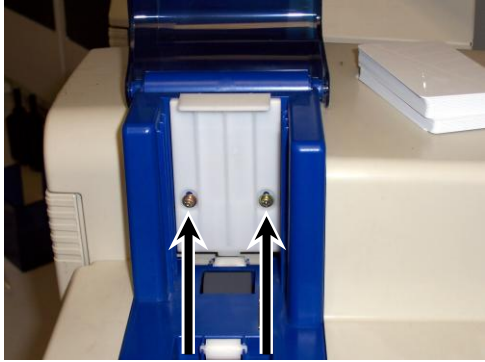


Figure A: Adjustable gate

3. Insert a card into the card feeder just under the gate.
4. Lower the gate until it slightly touches the card.

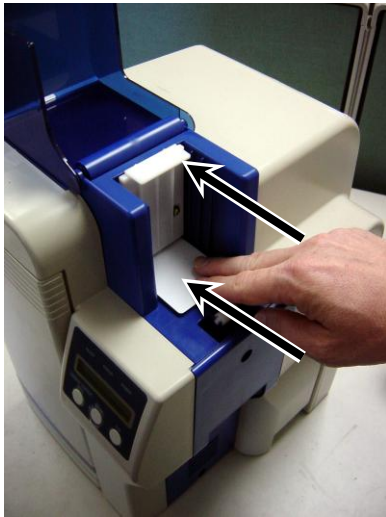


Figure B: Lower gate

5. Raise the gate one half the thickness of the card and tighten the screws.
6. Test the new adjustment by attempting to slide two cards under the gate. If two cards slide under the gate, the gap width is incorrect and return to step 3. You should not be able to slide two cards into the gap.